

Catler[®]

400 SERIES

CLASS GRADE TOOLS

DIGITAL KITCHEN SCALE

Instruction for use



KS 4010

**DIGITAL
KITCHEN
SCALE**

CONTENTS

- 2 Congratulations
- 3 Catler recommends safety first
- 4 Description of kitchen scale
- 5 Operating kitchen scale
- 8 Care and cleaning



Congratulations

on the purchase of your new kitchen scale.


CATLER RECOMMENDS SAFETY FIRST

We at Catler are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.


IMPORTANT SAFEGUARDS FOR YOUR KITCHEN SCALE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they will not play with the appliance.
- Read all instructions before putting the kitchen scale into operation and save them for future reference.
- Remove any promotional labels / stickers before using the kitchen scale.
- In no cases repair or do modifications to the kitchen scale yourself. All repairs and maintenance should be carried out exclusively by an authorised Catler service centre.
- Use and store the kitchen scale away from flammable or volatile liquids.
- Do not place the kitchen scale on or near a hot gas or electric burner or where it could touch a heated oven. Do not expose the kitchen scale to excessive temperatures, direct sunlight, excessive humidity and do not use in a dusty places.
- Before first use check that you have correctly inserted 3 x AAA alkaline batteries (LR6).
- Replace flat batteries with new ones. Do not combine new and used batteries.
- If you do not use the kitchen scale for a longer time, always remove the batteries. Otherwise they may leak inside the kitchen scale and cause its damage.
- Dispose of flat batteries in accordance with local regulations. Do not throw batteries into standard household waste, but take to a location designated for battery disposal.
- Keep the kitchen scale clean. More information found in chapter "Care and maintenance".
- Do not use abrasive cleaning products or steel wool so that you do not scratch the surface.
- The kitchen scale has been designed only for household use.
- Do not use the kitchen scale for other purposes than those intended.
- Do not expose the kitchen scale to dripping or splashing water or other liquid. In no cases immerse the kitchen scale in water or any other liquid.
- Do not use rechargeable batteries in the kitchen scale.
- Any maintenance other than standard cleaning should be carried out exclusively by an authorised service centre.

DESCRIPTION OF KITCHEN SCALE

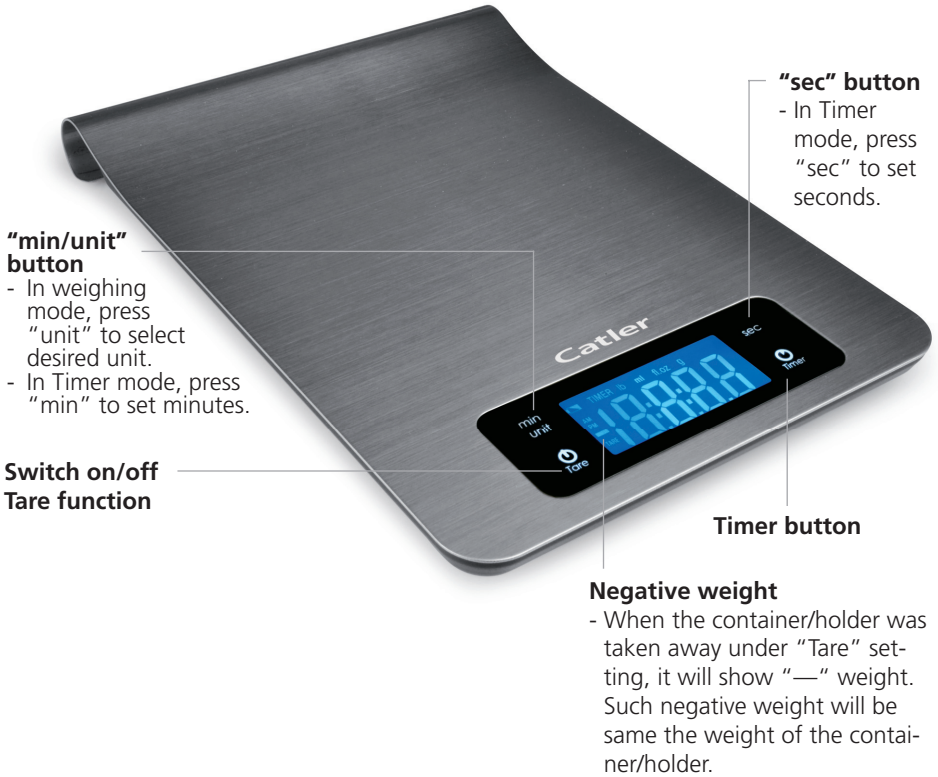

Touch display

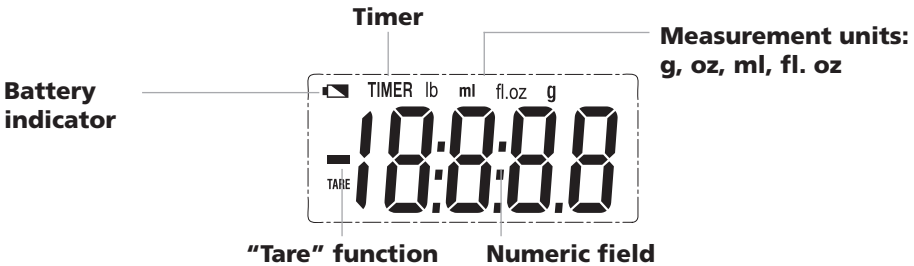

OPERATING KITCHEN SCALE

Before first use

Remove and safely discard any packaging material or promotional labels before using the kitchen scale for the first time.

Wipe your kitchen scale over with a soft, damp cloth and dry thoroughly.

Inserting batteries

Remove the battery compartment cover placed on the bottom of the scale.

Insert 3 x AAA alkaline batteries according to polarity graphics in battery compartment.

Replace the battery compartment cover and close it.

Place the kitchen scale on a flat and dry surface.

If you do not use the kitchen scale for a longer time, always remove all batteries.


NOTE


Battery indicator: If battery is low, the "Lo" indicator appears on the display for about 2 seconds and the kitchen scale will be turned off.

NOTE


Weighing

Turning on / off

Press once  button, display shows "0" and the scale turns into the last set unit. Now the kitchen scale is ready to use.

Press and hold  button for about 5 seconds and the scales turns off.

Setting measurement unit

Press  button repeatedly in weighing mode when showing "0.0" or "0" and choose the measurement unit.

Units will change in the following order:
g → oz → ml → fl.oz → g.

To change the unit is possible only when the scale is set to zero and in the resting state.

NOTE

When operating the scale in the unit of "oz", if the weight is over 16 oz, both units "lb" and "oz" will be displayed at the same time.

NOTE

Overload indicator: EEEE.

If weight is over 5250 g, the scale will display "EEEE" (overload indicator).

NOTE

Do not place food on the scale. But always use a film, bowl or other container.

NOTE



Automatic switch off function


Weighing mode: If you do not operate the scale for about 10 seconds, the display backlight dims and the scale will be turned off automatically in about another 1 minute.


Timer mode: If you do not operate the scale in timer or the scale does not start to count down in about 10 seconds, the display backlight dims and the scale will be turned off automatically in another 20 seconds.

“TARE” function

Tare function is used to weigh food in a bowl when you need to know only the weight of the ingredients. Follow these instructions:

- a) Place a suitable container in which you wish to weight the ingredient on the scale. Press shortly  button and the display will be set to zero.
- b) Put the ingredient into the container. The weight will be shown on the display. If you want to weigh another ingredients in the same container, after each weighing, press shortly  button. The display will be always set to zero and will be ready to weigh another ingredient.

If the container weight is less than 600 g, press once shortly  button. The display shows “0”. The maximum weighting will be still 5000 g.

If the container weight is more than 600 g, e.g. 605 g, press once shortly . The display shows “0” and at the same time it displays “TARE”.

The maximum weighting capacity will be reduced by 605 g, it means the maximum weighting capacity will be equal to 4395 g (5000 g – 605 g)








Maximum weighting capacity: 5000 g / 11 lb :
0,4 oz / 5000 ml / 176,4 fl.oz

Minimum weighting capacity: 2 g



NOTE

Timer function

You can use the Timer function when cooking which requires precise cooking time, such as pasta or rice.

1. Press  button to switch to a timer mode. There you can set the time to count down.
2. Press  button to adjust minutes and  button to adjust seconds.
3. To confirm the adjusted time press  button and the scale begins to count down. If you wish to pause the countdown, press once  button. The countdown stops. And if you wish to continue, press again  button.
4. When the countdown finished, the scale will beep for about 1 minute. To stop beeping press any key on the display.
5. To reset the timer, press and hold  button for about 3 seconds and the display shows “00:00”.

Switching modes

1. In timer mode, press  to switch to weighing mode.
2. In weighing mode, press  to switch to timer mode.

Tips on using

1. Place the bowl which you will use for weighting in the centre of the scale to obtain a more accurate weight.
2. Do not place the scale on the carpet.
3. Always place the scale on a flat and dry surface. To ensure accuracy, do not place anything on the scale, if it is not in use.
4. To ensure long battery life, always turn off the scale after weighting of all ingredients.

CARE AND CLEANING

Cleaning the kitchen scale

Wipe the outside finish with a damp soft cloth and dry thoroughly.

Do not use steel wool, scouring pads or abrasive kitchen cleaners as they will scratch the scale.

Never immerse the kitchen scale in water or any other liquid. Do not place the kitchen scale in dishwasher.

NOTE

Storage

Store the kitchen scale in a dry and cool location, like a kitchen cupboard. This will help prevent the salt from higher temperatures and humidity. This will be protected from any dust and other impurities.

If you do not use the kitchen scale for a longer time, always remove all batteries.

DISPOSAL OF USED BATTERIES

Do not place used batteries in standard household waste. Take them to designated collection points. More information is available at local government authorities.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

 Catler®

400 SERIES
CLASS GRADE TOOLS

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.

DIGITAL KITCHEN SCALE



W W W . C A T L E R . E U

CUSTOMER SERVICE

I N F O @ C A T L E R . E U