

Overview

1. Multifunction Button For Bluetooth® Pairing / Play / Pause

2. Mode Button Change from Bluetooth® Aux-in → MicroSD → USB Audio

AUX-IN (Blue)
SD CARD (Green)
USB AUDIO (Purple)

Vol - Vol +

100% - 75%
75% - 50%
50% - 25%
25% - 1%

PC/MAC

* (Not included)

Source Selection

Bluetooth®

USB Audio

SD Card

Source: Bluetooth®

1. Turn on the speaker.

2. Turn on Bluetooth on the mobile device.

3. Press the Multifunction button (M) for 3 sec.

4. LED indicator shows pairing mode.

5. Select the speaker from the mobile device's Bluetooth list.

M + M = Bluetooth Pairing

Aux-in

1. Connect Mobile Device or PC/MAC to the Aux-in port.

2. Press the Multifunction button (M) to select Aux-in.

3. Press the Multifunction button (M) with the Mode button (M) to play/pause.

M + M = Play/Pause

M + - = Previous

M + + = Next

Wireless Stereo: Link

1. Turn on both speakers (LL and RR).

2. Press the Mode button (M) for 3 sec on the LL speaker.

3. The RR speaker automatically links.

4. Press the Multifunction button (M) for 3 sec to confirm linking.

5. LED indicator shows linking status.

⚠️ AUX-IN, USB Audio, SD Card, Bluetooth®

Register your products at www.creative.com/register

TECHNICAL SUPPORT www.creative.com/support

© 2016 Creative Labs Pte. Ltd. All rights reserved. Creative, the Creative logo, and MUVO are trademarks or registered trademarks of Creative Technology Ltd in the United States and/or other countries. The Bluetooth® word mark and logo are owned by the Bluetooth® SIG, Inc. and any use of such marks by Creative Technology Ltd is under license. microSDHC, microSDXC logos are trademarks of SD-3C, LLC. All other trademarks are the property of their respective owners and are hereby recognized as such. All specifications are subject to change without notice. Actual product may differ slightly from images shown. Use of this product is subject to a limited warranty.

EN | Technical Specifications

Bluetooth® Version: Bluetooth® 4.2
Operating Frequency: 2402 - 2480 MHz
Operating Range: Up to 10 meters, measured in open space. Walls and structures may affect range of device.
Supported Bluetooth® Profiles: A2DP (Wireless Stereo Bluetooth®), AVRCP (Bluetooth® Remote Control), HFP (Handsfree profile)
Supported Codec: SBC
Supported Audio Formats (For SD card playback): MP3, WAV, WMA, FLAC
Does not support WMA PRO/lossless, (Extra High and above)
Support USB Audio for PC/MAC
Lithium Ion Battery: 3.7V 650mAh (2.41Wh)
Input: 5V 650mA
Battery Saving Mode: The speaker automatically powers down when there is no Bluetooth® connection or no audio cable attached for more than 10 minutes.
Operating Temperature Range: 0°C - 45°C
Note: Compliance markings are located on the bottom of this product.
*** Not Included. Sold Separately.**

Other Information

For the latest, online version of this guide, DoC and supplementary documentation such as safety and regulatory information for this product, please visit creative.com/support/muvo2c

Detailed instructions on removal of integrated battery can be found at Quickstart User Guide / Safety and Regulatory Information (creative.com/support/muvo2c), these instructions are meant strictly for independently qualified professionals.

Notice for Singapore

Complies with IDA Standards DA 107311

Source: SD Card

1. Insert MicroSD (SD Card 128GB Max) into the speaker.

2. Press the Multifunction button (M) for 3 sec.

3. Press the Multifunction button (M) with the Mode button (M) to play/pause.

M + M = Play/Pause

M + - = Previous

M + + = Next

Read SD Card

1. Turn off the speaker.

2. Remove the MicroSD card.

3. Connect the card to a PC/MAC using a USB card reader.

Source: USB Audio

1. Connect PC/MAC to the USB port.

2. Press the Multifunction button (M) for 3 sec.

3. Press the Multifunction button (M) with the Mode button (M) to play/pause.

M + M = Play/Pause

M + - = Previous

M + + = Next

creative.com/support/muvo2c
 日本語: jp.creative.com/downloads/muvo2c

P/N. 03MF825000000 Rev D

