

Wireless noise cancelling stereo headset

Reference Guide
Guide de référence
Guia de referencia
Referenzanleitung

Referentiegids
Guida di riferimento
Felhasználói útmutató
Przewodnik



N Bluetooth® DIGITAL

WI-SP600N

©2018 Sony Corporation
Printed in Malaysia
4-730-312-41(1)



* 4 7 3 0 3 1 2 4 1 * (1)

<http://www.sony.net/>

Other trademarks and trade names are those of their respective owners.

Precautions

On BLUETOOTH® communications

The Bluetooth wireless technology operates within a range of about 10 m. Maximum communication range may vary depending on obstacles (human body, metal, wall, etc.) or environmental conditions.

Bluetooth communications may be disabled, or noise or audio dropout may occur under the following conditions.

- There is an obstacle between the unit and the Bluetooth device.

This situation may be improved by placing the Bluetooth device closer to the unit.

- There is an obstacle, such as metal or a wall, between the unit and the Bluetooth device.

- A Wi-Fi device or microwave oven is in use, or microwave ovens are near the unit.

- The aerial is built into the unit as illustrated in the dotted line (Fig. A).

The quality of the Bluetooth communications will improve by removing any obstacles between the connected Bluetooth device and the aerial of the unit.

- Because the unit and the Bluetooth device use the same frequency (2.4 GHz), microwave interference may occur resulting in noise or audio dropout. The unit is used near a Wi-Fi device. In such a case, perform the following.

- Use this unit at least 10 m away from the Wi-Fi device.

- If the unit is used within 10 m of a Wi-Fi device, turn off the Wi-Fi device.

- Install this unit and the Bluetooth device as near to each other as possible.

Microphones built into a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as instructed by your healthcare provider:

- Where inflammable gas is present, in a hospital, or a petrol station.

- Near electrical doors or a fire alarm.

- Due to the characteristic of the wireless technology, the sound played on this unit is delayed from the sound and played via the sending device. Therefore, the image and sound may not be synchronized when watching TV or playing a game.

- Do not use this unit on an airplane. Radio waves may affect the operation causing an accident due to malfunction.

- This unit supports security capabilities that comply with the Bluetooth standard to provide a secure connection when communicating using the unit. However, security may not be enough depending on the setting. Be careful when communicating using Bluetooth wireless technology.

- We do not take any responsibility for the leakage of information during Bluetooth communications.

- Connection with all Bluetooth devices cannot be guaranteed.

- A device featuring Bluetooth function is required to conform to the Bluetooth standard specified by Bluetooth SIG, Inc. and has been certified.

- Even if the connected device conforms to the above mentioned Bluetooth standard, some devices may not be compatible with this unit depending on the features or specifications of the device.

- While talking on the phone hands free noise may occur, depending on the device or communication environment.

- Depending on the device to be connected, it may require some time to connect.

Sound is frequently during playback

- The situation may be improved by setting the sound quality mode to "Priority" on stable connection." For details, refer to the User Guide.

- The situation may be improved by changing the wireless playback quality settings or fixing the wireless playback mode on the transmitting device. For details, refer to the operating instructions supplied with the transmitting device.

- If you are using a smartphone, the situation may be improved by turning down unnecessary applications or rebooting the smartphone.

On the use of calling apps for smartphones and computers

- This unit supports normal incoming calls only. Calling apps for smartphones and computers are not supported.

On charging the unit

- This unit can be charged using either a power outlet or a USB port. A power outlet is required for charging.

- This unit cannot be turned on, nor can the Bluetooth and noise cancelling functions be used, during charging.

- If you do not use the unit for a long time, fully recharge the battery to keep a charge properly after recharging.

- The battery will be able to keep a charge properly after repeatedly discharging it several times.

- If you do not use the unit for a long time, charge the battery once every half year to prevent over-discharge.

- If the length of time you can use the unit became shorter than usual, the battery should be replaced with a new one. Please contact your nearest Sony dealer for a battery replacement.

- Make sure the micro-USB port cover securely after charging (Fig. B).

Note on static electricity

- Static electricity accumulated in the body may cause mild tingling in your ears. To minimize the effect, wear clothes made of natural fibers.

If the unit does not operate properly

- Reset the unit (Fig. C). Press the **(D)** and **(E)** buttons simultaneously while charging.

- The problem persists even after the resetting operation.

- If the problem persists even after the resetting operation.

- The unit cannot be turned on, nor can the Bluetooth and noise cancelling functions be used, during charging.

- If you do not use the unit for a long time, fully recharge the battery to keep a charge properly after recharging.

- The battery will be able to keep a charge properly after repeatedly discharging it several times.

- If you do not use the unit for a long time, charge the battery once every half year to prevent over-discharge.

- If the length of time you can use the unit became shorter than usual, the battery should be replaced with a new one. Please contact your nearest Sony dealer for a battery replacement.

- Make sure the micro-USB port cover securely after charging (Fig. B).

What is noise cancelling?

- The noise cancelling function actually senses outside noise with built-in microphones and sends an audio-bit opposite cancellation signal to the unit.

- The noise cancelling effect may not be performed in a certain environment, such as when the unit is being heard.

- Depending on how you wear the unit, the noise cancelling effect may vary or a beep sound (howling) may occur. In these cases, take off the unit and put it on again.

- The noise cancellation works for noise in the low frequency range, mainly. Although noise is reduced, it is not cancelled completely.

- When you use the unit in a train or a car, no noise may occur depending on street noise.

- The noise cancellation may interfere and noise could otherwise be caused by inappropriate waste handling.

- The recycling of the material will help to conserve natural resources.

- In case of products for safety, performance or data integrity reasons requiring a mandatory compliance with an international standard, the customer must contact the qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the applicable collection system for the disposal of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product. For more information, refer to the recycling symbol point for the recycling of waste batteries. For more detailed information about recycling of this product, or battery, please contact your local waste office, your local waste disposal service or the shop where you purchased it.

The validity of the CE marking is restricted to only those countries where the law enforces, mainly in the EU/EFTA/European Economic Area.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of them by Sony Corporation is under license.

The X-Mark® is a trademark or registered trademark of NFC Forum, Inc. and its other registered trademarks.

X-Mark is a registered trademark or trade name of Microsoft Corporation in the United States and in other countries.

Mac OS, X Phone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to work specifically with the iPod or iPhone, respectively, and has been certified by the developer as meeting Apple's performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that use of this accessory with iPod or iPhone may affect wireless performance.

Android is a trademark of Google Inc.

• Do not splash water forcibly against the cylindrical part from which sound is emitted. Doing so may deteriorate the spray proof performance of the unit.

• When you are using the headphones, place and accumulators onto the rubber of the earbuds, face up, to prevent damage to the earbuds.

• Do not drop the unit or expose it to mechanical shock.

• Do not expose the unit to water or sweat.

• Wipe off with soft dry cloth any water that gets on the unit. If water remains in the earbuds holes, the sound may become distorted. Please clean the earbuds holes to remove the earbuds, face the sound conduct downward, and shake the sound conduct couple of times (Fig. D).

• Do not use the unit in a place where it is exposed to the water flow. In order to avoid malfunctions, make sure that you wipe off water after use.

• If the unit is cracked or deformed, refrain from using the unit. Water may leak from the cracks.

• Do not use the unit in a place exposed to humidity, dust, sweat or steam, or in a place subject to direct sunlight.

• Do not expose the unit to excessive heat or cold.

• Do not expose the unit to water or sweat.

• High humidity may affect your hearing.

• If you are using the unit in a place where there is a high traffic, please clean the earbuds.

• Do not use the unit in places where it would be dangerous if you are unable to hear ambient sound, such as at road crossings, train stations, and construction sites.

• Keep earbuds clean. To clean earbuds, wash them with warm water.

• Do not subject the unit to excessive shock.

• Clean the unit with a soft dry cloth.

• Do not expose the unit to water or sweat.

• Do not use the unit in places where it would be dangerous if you are unable to hear ambient sound, such as in the rain or snow.

• If you experience discomfort after using the unit, stop using the unit.

• Remove the earbuds firmly. If an earbud accidentally detaches and is in your ear, it may cause injury.

• If you have any questions or problems concerning this unit, please contact your nearest Sony dealer.

• To maintain the performances anti-éclaboussures de l'appareil

Les caractéristiques de résistance aux projections d'eau de cet appareil sont équivalentes aux normes de sécurité de l'IEC 60529 - Degrés de protection contre la pluie et les éclaboussures. Les caractéristiques de résistance de l'eau de cet appareil sont équivalentes aux normes de sécurité de l'IEC 60529 - Degrés de protection contre la pluie et les éclaboussures.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

• Pour empêcher les dégâts causés par l'eau ou la sueur, veillez à ce que l'appareil soit sec et propre.

