



PowerA™

ENHANCED WIRED CONTROLLER INSTRUKCJA



 
 
NINTENDO SWITCH™

Obsługa klienta

BDA Inc.
15525 Woodinville-Redmond Rd NE
Woodinville, WA 98072

OBSŁUGA KLIENTA

Dwa lata ograniczonej gwarancji
Aby uzyskać szczegółowe informacje na temat gwarancji lub wsparcie dla oryginalnych akcesoriów PowerA, odwiedź PowerA.com/Support.

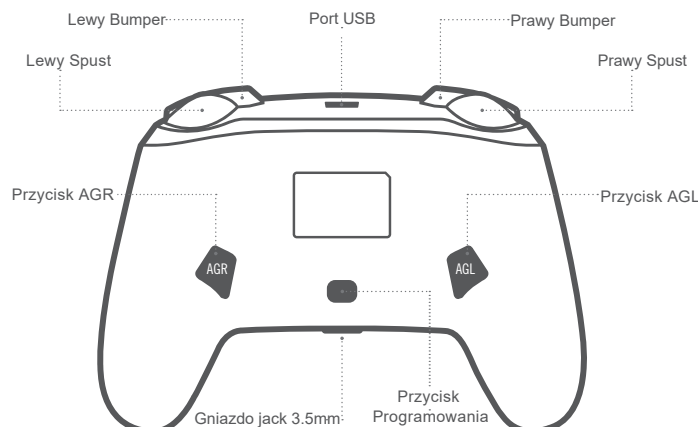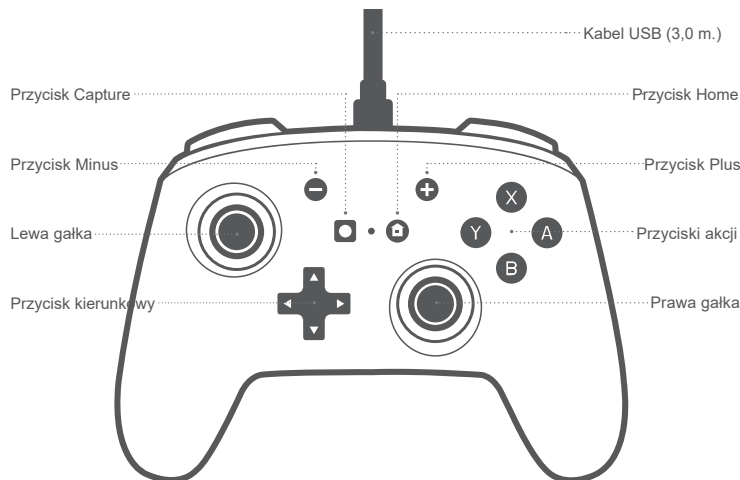

POLSKI

ZAWARTOŚĆ

- Enhanced Wired Controller
- Kabel USB (3,0m.)
- Instrukcja

USTAWIENIA

1. Upewnij się, że Nintendo Switch jest włączony i podłączony do telewizora.
2. Włóż kabel USB do portu USB w stacji dokującej Nintendo Switch. Podłącz drugi koniec kabla do kontrolera. Kontroler jest teraz gotowy do użycia.

UŻYTKOWANIE

Możesz podłączyć jednocześnie kilka kontrolerów do konsoli Nintendo Switch. Powiadomienia na ekranie wskazują, do którego portu USB jest podłączony każdy kontroler.

PROGRAMOWANIE PRZYCISKÓW (AG)

1. Naciśnij i przytrzymaj przycisk programowania (tył) przez 2-3 sekundy. Dioda programu (przód) będzie migać, sygnalizując, że kontroler jest w trybie programowania.
2. Naciśnij 1 z następujących przycisków (A / B / X / Y / L / R / ZL / ZR / L3 / R3 / Przycisk kierunkowy). Następnie naciśnij przycisk (AGR lub AGL), który chcesz przypisać. Dioda programu przestanie migać, sygnalizując, że przycisk AG został przypisany.
3. Powtórz dla drugiego przycisku AG

UWAGA: Zaprogramowane przyciski zostaną zapamiętane po wyłączeniu kontrolera.

RESETOWANIE PRZYCISKÓW AG

1. Przytrzymaj przycisk programowania przez 2-3 sekundy. Dioda zasilania zacznie powoli migać, sygnalizując, że kontroler jest w trybie programowania.
2. Naciśnij i przytrzymaj przycisk programowania przez 5 sekund, aby zresetować.

ROZWIĄZYWANIE PROBLEMÓW

Pyt. 1. Dlaczego mój kontroler nie łączy się z konsolą Nintendo Switch?

Odp. 1. Sprawdź, czy kabel USB jest prawidłowo podłączony do kontrolera przewodowego i stacji dokującej Nintendo Switch.

Odp. 2. Przed podłączeniem kontrolera przewodowego sprawdź, czy przełącznik Nintendo jest włączony i podłączony do zewnętrznego wyświetlacza.

Odp. 3. Sprawdź, czy twoja konsola Nintendo Switch ma zainstalowaną najnowszą wersję systemu.

Pyt. 2. Dlaczego nie odczuwam wibracji podczas używania tego kontrolera?

Odp. 1. Ten produkt nie obsługuje funkcji wibracji

OZNACZENIA



Symbol WEEE informuje użytkownika końcowego o wymaganiach dotyczących selektywnej utylizacji WEEE (odpady sprzętu elektrycznego i elektronicznego), zgodnie z wymogami art. 11 ust. 2 dyrektywy WEEE i zaleconymi przez normę europejską EN50419: 2005.



CE to znak certyfikacyjny wskazujący zgodność ze standardami ochrony zdrowia, bezpieczeństwa i ochrony środowiska dla produktów sprzedawanych w Europejskim Obszarze Gospodarczym.

WYPRODUKOWANE

Bensussen Deutsch & Associates, LLC. (BDA, LLC.) 15525 Woodinville-Redmond Rd. NE Woodinville, WA 98072. BDAINC.com | POWERA.com

INFORMACJE PRAWNE

PowerA i logo PowerA są znakami towarowymi firmy Bensussen Deutsch and Associates, LLC. TM oraz © Bensussen Deutsch and Associates, LLC. Znak słowny i logo Bluetooth® są zastrzeżonymi znakami towarowymi będącymi własnością Bluetooth SIG, Inc., a każde użycie tych znaków przez PowerA podlega licencji. Nintendo Switch™ jest znakiem towarowym firmy Nintendo. © 2020 Nintendo. Licencjonowane przez Nintendo. Wszelkie prawa zastrzeżone. Wszystkie pozostałe znaki handlowe są własnością ich właścicieli.



PowerA™

ENHANCED WIRED CONTROLLER

USER MANUAL

Manuel de l'utilisateur
Bedienungsanleitung
Manual de usuario
Manuale per l'uso
Manual do usuário



NINTENDO SWITCH™

Customer Service

Service client
Kundendienst
Servicio a clientes
Assistenza clienti
Apóio ao Cliente

BDA Inc.
15525 Woodinville-Redmond Rd NE
Woodinville, WA 98072

2-Year Limited Warranty: Visit PowerA.com for details and to register your product



Garantía limitada de 2 años. Visita PowerA.com para obtener detalles y para registrarte.

Garantia limitada de 2 años: Visita PowerA.com para obter detalhes e registrar o teu produto

Beschränkte 2-Jahres-Garantie – Details und Informationen zur Anmeldung finden Sie unter PowerA.com.

Garantie limitée de 2 ans – Rendez-vous sur PowerA.com pour de plus amples informations et pour enregistrer votre achat.

  Garantia limitada de 2 años: Visita PowerA.com para obter detalhes e registrar o teu produto

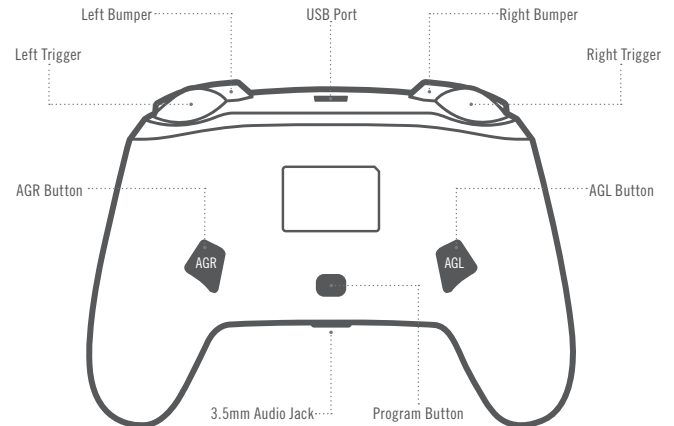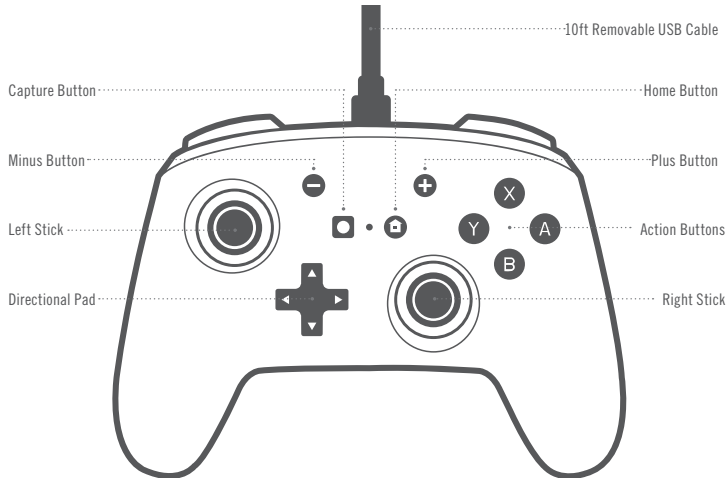

ENGLISH CONTENTS

- Enhanced Wired Controller
- 10ft USB Cable
- User Manual

SET UP

1. Make sure your Nintendo Switch System is powered on and connected to your TV.
2. Insert the USB cable into a USB port on the Nintendo Switch Dock. Connect the other end of the cable to the wired controller. Your wired controller is now ready for use.

BASIC USAGE

Connect multiple wired controllers to the Nintendo Switch Console at a time. On-screen notifications will indicate which USB channel each controller is connected to.

ASSIGNING ADVANCED GAMING BUTTONS

1. Press and hold the program button for 2-3 seconds on the back of the controller. The program LED indicator will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/L/R/ZL/ZR/Left Stick Press/Right Stick Press/D-pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The Program LED indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

RESETTING ADVANCED GAMING BUTTONS

1. Hold the program button down for 2-3 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in program mode.
2. Press and hold the Assign Program Button for 5 seconds to reset to no function.

TROUBLESHOOTING

Q1. Why isn't my controller connecting to my Nintendo Switch Console?

A1. Confirm that the USB Cable is securely connected to the Wired Controller and the Nintendo Switch Dock.

A2. Confirm that the Nintendo Switch is powered on and connected to an external display before connecting your wired controller.

A3. Confirm that your Nintendo Switch has the latest System Update installed.

Q2. Why don't I feel any vibration when using this controller?

A1. This product does not support vibration functionality

SUPPORT

For support with your PowerA accessories, please visit the Support section of PowerA.com

This symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

MOTION WARNING

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, skin irritation or eyestrain: • Avoid excessive play. Take a 10 to 15 minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play. • If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again. • If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3(B)/NMB-3(B):

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

AUSTRALIAN WARRANTY STATEMENT:

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of

returning the product to the retailer of purchase are the full responsibility of the consumer.

AU WHOLESALE DISTRIBUTOR:

Level 2, 2 Darling Street South Yarra, Australia VIC 3141
bluemoon.com.au | Email: support@bluemoon.com.au

MANUFACTURED BY:

Bensussen Deutsch & Associates. (BDA.) 15525 Woodinville-Redmond Rd. NE Woodinville, WA 98072 BDAINC.com | POWERA.com

SUPPORT/ADDITIONAL LEGAL

For more FAQs and support, visit powera.com/support PowerA, and the PowerA logo are trademarks of Bensussen Deutsch and Associates. TM and © Bensussen Deutsch and Associates. This product is manufactured under license from Microsoft Corporation. Microsoft, Xbox, Xbox LIVE, Xbox One, and the Xbox logos are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

FRENCH

CONTIENT

- Manette filaire optimisée pour Nintendo Switch
- Câble USB de 3 m
- Manuel de l'utilisateur

INSTALLATION:

1. Assurez-vous que votre système Nintendo Switch est en marche et raccordé à votre télévision.
2. Insérez le câble USB dans le port de la station d'accueil de votre Nintendo Switch. Raccordez l'autre extrémité du câble à la manette filaire. Votre manette filaire est prête à l'emploi.

UTILISATION

Raccordez simultanément plusieurs manettes filaires à votre console Nintendo Switch. Les notifications à l'écran vous indiqueront à quel canal USB est raccordée chaque manette.

PROGRAMMER LES BOUTONS DE JEU PROGRAMMABLES :

1. Appuyez sur le bouton de programmation à l'arrière de la manette et maintenez-le enfoncé pendant 2 à 3 secondes. Le voyant LED à l'avant clignotera, indiquant que la manette est en mode d'affectation.
2. Ensuite, appuyez sur une fonction de la manette à

