



Manual  
Gebruiksaanwijzing  
Gebrauchsanweisung  
Mode d'emploi  
Bruksanvisning  
Brugsvejledning  
Käyttöopas  
Uživatelská příručka  
Používateľská príručka  
Εγχειρίδιο χρήσης

دخست سمل لي دل


XP500



#MOREENERGY



 - LiFePO<sub>4</sub> - 614Wh (19.2V/32Ah)
- 324x197x185mm
- 8kg
- DC 6.5mm input port 11-26V, 96W max
- Solar Charging (PV) 12-26V, 200W max
- USB-C PD input/output 60W
- Output AC 2x 220V/50Hz - 500W max
- Output 2x DC 5.5mm port 12V/5A, 60W max
- Output Car charger 12V/10A, 120W max
- Output USB 2x USB-A 5V/3.1A  
1x USB-A QuickCharge 3.0 18W
- Max output: 500W
- AC power cord, Car Charger, MC4 > Anderson (PV), cable pouch, manual

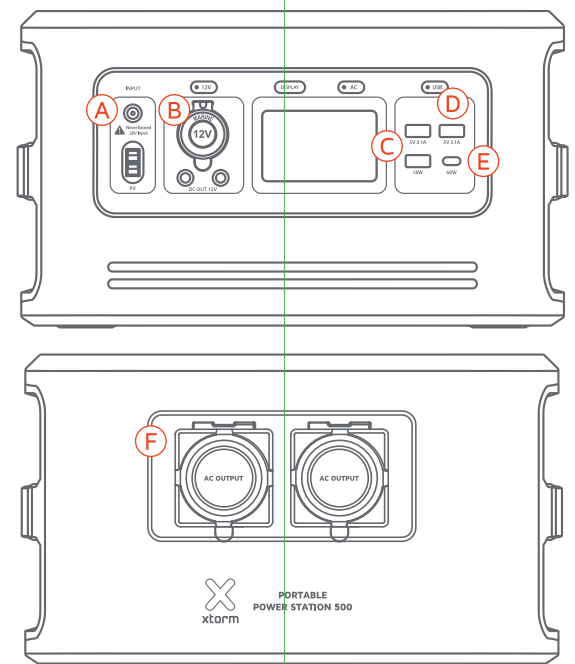

2

- A DC 6.5mm input port: 11-26V, 96W max
- B Output 2x DC 5.5mm port: 12V/5A, 60W max  
Output Car charger: 12V/10A, 120W max
- C 2x USB-A (5V/3.1A)
- D 1x USB-A QC 3.0 18W (5V.3A, 9V/2A, 12V/1.5A)
- E 1x In/Output USB-C PD 60W (5V/3A, 9V2.22A, 12V/1.5A)
- F Output AC 2x 500W (220V / 50Hz)

HOW TO USE THIS POWERSTATION

Press the button on the output you want to use

FOR USB/DC OUTPUT:  
Press 1 second

FOR AC OUTPUT:  
Press 2 seconds

 
The output is working when the green light turns on. You can now use this output

TIP: when not using an output, turn it off to save energy.


3

**CHARGING FROM WALL CHARGER:**  
Use the included AC charging adapter to connect to the 6.5mm DC input port. (max 96W)  
You can also connect a use a USB-C PD charger to the USB-C port. (max 60W)

**CHARGING FROM A SOLAR PANEL:**  
Connect your Solar Panel to the powerstation via the included MC4 to Anderson cable.  
This way you can recharge with up to 200W!

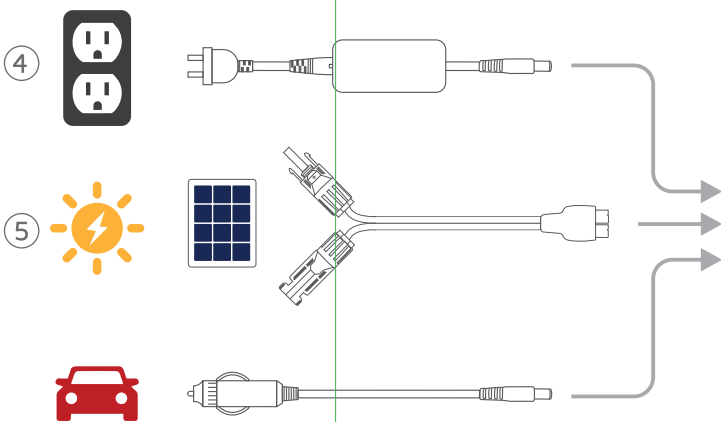


 **IMPORTANT NOTE:**  
When using a Solar Panel to recharge the Power Station, make sure the power does not exceed 26V. If more power is used it can cause serious damage to the unit.

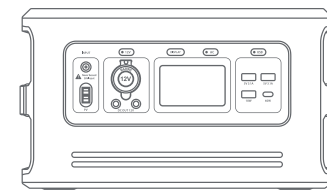

6 **RECHARGING THE POWER STATION**  
The Power Station is fully charged when the LCD display shows 100%.

 7

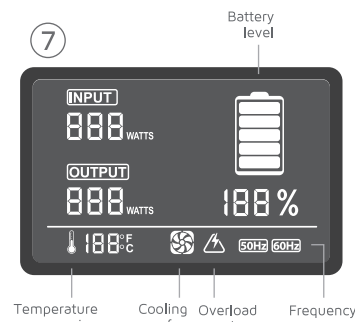

Temperature warning Cooling fan Overload warning Frequency

8



**EN: Warnings**  
Don't drop, disassemble or attempt to repair the charger by yourself. Avoid exposure to water or high humidity. Don't expose to any heat source. Keep out of reach of children. Don't use in the presence of flammable gas.

**SK: Upozornenia**  
Nepoušajte, nerozoberajte ani sa nepokúšajte opraviť nabíjačku sami. Vyvarujte sa pôsobeniu vody alebo vysokej vlhkosti. Nevyštvajte tepelným zdrojom. Uchovávajte mimo dosahu detí.

**PL: ostrzeżenia**  
Praciny nie próbować naprawiać tej aparatury ani nie rozbrajać jej samodzielnie. Należy unikać narażenia bodźkami na czułałe części i nie wystawiać dobowarki na działanie przed ciepła. Uchowywać nabyły urządzenie w miejscu niedostępnym dla dzieci. Ładowniki nie wolno używać w obecności gazów łatwopalnych.

**SE: varning**  
Forsög ikke selv på at reparere eller adskille lodderne selv. Udsæt ikke for væden eller høj luftfugtighed. Hold apparatet væk fra ildkilder. Hold apparatet væk fra børn. Anvend ej i nærheden af letantændelige gas.

**FR: Attention**  
Ne pas faire tomber ou démonter ou tenter de réparer le produit soi-même. Ne pas exposer le produit à l'eau ou dans un endroit trop humide. Ne pas poser le chargeur solaire près d'une source de chaleur. Tenir hors de portée des enfants. Ne pas utiliser en présence de gaz inflammables.

**IT: ATTENZIONE**  
Non usare vicino ad una fiamma. Non esporre vicino a fonti di calore elevato. Non modificare la struttura o disassemblare. Smettere di utilizzare immediatamente nel caso si sentano odori strani, calore, o strani rumori provenienti dallo stesso. Non lasciare giocare i bambini. Usare solo in luoghi asciutti. Ricordare l'apparato secondo le norme vigenti nella nazione di utilizzo.

**ES: Atención**  
No usar cerca el producto. No desmontarlo ni intentar repararlo, por sus propios medios. Evitar el contacto con el agua o fuentes de humedad. No exponer la alimentación a una fuente de calor. Mantenga fuera del alcance de los niños. No utilizar en presencia de fuentes o gas infl. amables.

**CZ: UPOZORNĚNÍ**  
Nepouštějte, nerozobírejte ani sa nepokúšajte opraviti nabíjačku sami. Vyvarujte sa pôsobeniu vody alebo vysokej vlhkosti. Nevyštvajte tepelným zdrojom. Uchovávajte mimo dosahu detí.

**AR: تحذيرات**  
لا تقم بتفكيك أو إصلاح هذا الجهاز بنفسك. تجنب التعرض للمياه أو الرطوبة العالية. لا تعرض الجهاز لأي مصدر حرارة. ابعث الجهاز بعيداً عن متناول الأطفال. لا تستخدم الجهاز في أماكن تحتوي على غازات قابلة للاشتعال.

**XTORM**  
Hoofdvestee 19  
3992 DH Houten  
The Netherlands  
T: + 31 (0) 30 635 4500  
F: + 31 (0) 30 635 4801  
www.xtorm.eu

FAQ & Troubleshooting

My device is not charging	1. Make sure the correct output port is turned on. For instructions, please follow step 2 of this manual. 2. Check if the battery level of the Power Station is above 20%. If not, please recharge.
The overload warning light is on (icon) and my device is not charging.	If the output is higher than the maximum capacity, the overload warning light will show (icon) and a red light will shine in the port's button. Fix: Disconnect your device, and then press the button of the port to recover.
The temperature warning light is on (icon).	When the Power Station warms up, the fan will turn on to cool it. If this is insufficient, the temperature warning light will show (icon). To prevent overheating, please allow the Power Station to cool down.
Can I use the outputs while the Power Station is recharging?	The USB and DC 12V and AC output ports are functional while the Power Station is being recharged.



